



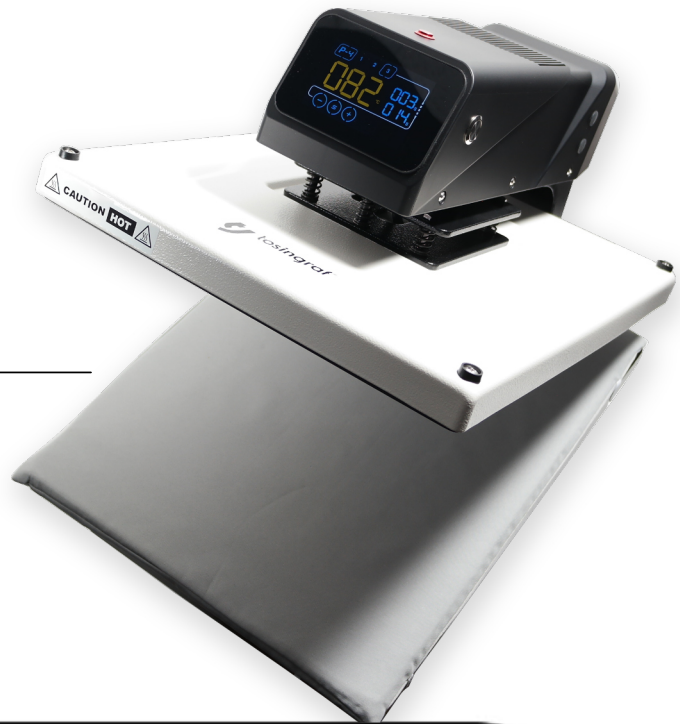

HP-ELE

Quick reference Guide

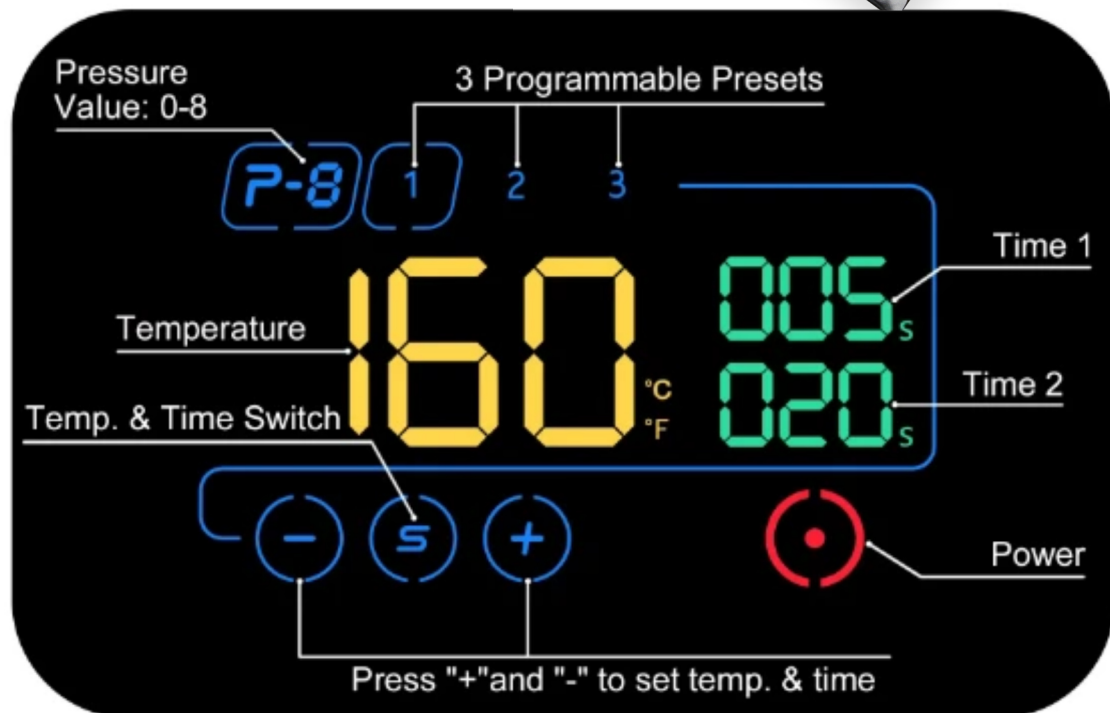

Press "S" button to set variables in the following sequence:

1. Temperature temperature required for transferring
2. Time 1 (preheat substrate or set at 0 sec to disable)
3. Time 2 (actual timer for transferring to substrate)
4. Pressure P0-P8 (Garments usually P4-P5).

Preset Programs, machine holds 3 preset programs, press "1" "2" "3"

In order to change setting via "S" it is important that machine has finished Timer 1 and Timer 2 cycle. To interrupt cycle press red emergency button on machine bulkhead.